

Product Manual for Wonderlust - Serenity - G-Spot Massager



How to Use:

Your new vibrator should come with a small initial charge and travel locked out of the box. If it does not have a charge, charge it using instructions in the charging section.

This vibrator has two buttons on the handle, one button is for power and one is to control the functions.

Travel Lock Feature:

Press and hold the power button for 3 seconds until the buttons blink twice.

ON/OFF Feature:

Press the power button. The buttons will light up when the vibrator is on.

Incremental Mode:

Press and hold the function button to increase power. As the power increases, the buttons will flash and will stop flashing once the maximum power is reached.

Function Mode:

Press the function button to cycle through all 20 functions.

Favourite Function Memory:

When you press and hold both buttons at once for 2 seconds, the vibrator will momentarily pause and then the buttons will blink. You will then feel 2 quick vibrations to confirm that you have saved the current function to the vibrator's memory. When it is turned on again at any time, it will automatically start on the saved function. Note that the memory will be reset when the vibrator is locked. To return to the regular function cycle at any time, quickly press the function button once.

Charging:

Insert the charging pin into the pinhole at the base, and then plug the other end into a USB wall adaptor. While the unit is charging, the light will flash. When it has finished charging, the light will be solid.

Note: Once you have completed charging this product, it will automatically be unlocked and ready for use.

Health and Safety Precautions:

Do not charge near water.

Do not charge if the USB cord appears damaged.

Do not use other USB cords with your product if you have lost the one provided.

Do not put the product in the dishwasher or microwave because it will damage your product.

This product is sold as a novelty only. It is not intended for medical applications or any use that has an adverse effect on any function of the body.

Use a toy cleaner for all your cleaning needs, before and after use. To avoid injury or aggravation of pre-existing physical conditions, this device should not be used on swollen or inflamed areas of skin. Wash before and after use. Do not share with other sexual partners. Help to prevent other sexual diseases through the use of condoms, sexual education, proper judgment and rigorous, diligent care.

Never let children play with this product.

In case of pregnancy, diabetes or illness, consult your physician before use.

When traveling, always make sure this product has been properly turned off and locked.

NOTE: The body of this vibrator is NOT waterproof. DO NOT SUBMERGE IN WATER.

Do not use if the silicone appears broken or damaged.

Only use a water-based lubricant with this product, as silicone-based lubricants have been known to damage silicone products.

Storage:

- Avoid extreme heat.
- When not in use, store this product in a cool, dry place away from the reach of children.
- Keep your product in a dust free location and away from contact with any other similar material or products.

Specifications:

All Wonderlust products are tested for material and electrical safety and are RoHS Compliant and CE Certified.

Battery: Lithium 700MAH

Run Time: Up to 5 hours

Vibrating Frequency: 1352-5408 RPM

Output: 5V 470MA

Weight: 149g (not including USB cord)

Composition: Silicone, ABS

Charging Time: Approximately 2 hours