

Product Manual for Duchess Swan - Dual Vibrator - Rechargeable - Lilac



THE DUCHESS SWAN GUIDE

The Duchess Swan has two independently controlled motors for internal and clitoral pleasure.

How to Use:

Your Duchess Swan should come with a small initial charge and be travel locked out of the box. If it does not have a charge, follow the instructions in the charging section.

This vibrator has 2 buttons used for turning ON/OFF, incremental speed control, and travel lock.

The top button controls the internal motor.

The bottom button controls the clitoral motor.

Travel Lock/ Unlock:

Press and hold both buttons for 4 seconds, or until you feel 2 quick vibrations. When travelling, always put your SWAN® in the "travel lock" mode.

ON/OFF:

To turn on the internal motor, press the top button once.

To turn on the clitoral motor, press the bottom button once.

The button(s) will light up when the vibrator is on. Press the button(s) again at any time to turn the vibrations off.

Incremental Speed:

Press and hold the top button to increase power within the internal motor.

Press and hold the bottom button to increase power within the clitoral motor.

As the power increases, the button(s) will flash and will stop flashing once the maximum power is reached. Let go of the button(s) at any time or once you have reached your desired speed.

Cleaning:

It is important to clean your product with toy cleaner before and after every use. To clean, simply spray or pump the cleaner onto a cloth or directly onto the applicable surface, and wipe. Rinse away the cleaner with water and leave the product to air dry.

Always unplug before cleaning and allow to completely dry before use. Do not use any type of solvents such as alcohol or benzene, which may damage not only the finish, but the product itself. To avoid shock, keep the USB cord free from tangling and inspect it for damage frequently.

Charging:

Insert the pin of the USB cord into the charge port located on the bottom of The Duchess Swan, and then plug the USB cord into a USB wall adaptor. The LED light will glow indicating that the unit is charging. When the unit is fully charged, the light will disappear. After charging is complete, The Duchess Swan will unlock automatically and be ready for use.

If the product will not be used for long periods of time, the battery should be recharged at least once every three months. If possible, avoid fully draining the battery. Charge often between uses to prolong battery life. Only charge with the USB cord provided.

Health and Safety Precautions:

Do not charge near water.

Do not charge if the USB cord appears damaged. Do not use other USB cords with your product if you have lost the one provided. Contact www.swanvibes.com for more information about adaptors. As USB wall charging adaptors vary by country, be sure to use the proper one for your area. Do not use the product while it is charging.

Do not put the product in the dishwasher or microwave because it will damage your product and void the warranty.

This product is sold as a novelty only. It is not intended for medical applications or any use that has an adverse affect on any function of the body. Use a toy cleaner for all your cleaning needs, before and after use.

To avoid injury or aggravation of pre-existing physical conditions, this device should not be used on swollen or inflamed areas of skin. Wash before and after use. Do not share with other sexual partners. Help to prevent other sexual diseases through the use of condoms, sexual education, proper judgment and rigorous, diligent care.

Never let children play with this product. In case of pregnancy, diabetes or illness, consult your physician before use. SWAN products are powerful due to PowerBullet® technology and are intended to be used for pleasure. Should any discomfort or pain result, consult your physician.

Troubleshooting:

When I press the button, the unit does not vibrate.

The unit is not charged. Charge it using the instructions in the charging section.

When I press and hold the button, it vibrates and then stops when I let go.

Double-pressing the button will cause it to turn on and turn off. Make sure to press and hold the button until it reaches the desired vibration speed and then let go.

When I press and hold the button, the speed doesn't change.

When pressing and holding the button, once the light stops flashing, you have reached the highest speed.

I want to gradually increase speed as I go along, but it always stops and then I have to press and hold again for longer each time.

You can increase speed by pressing and holding the button. If you do not press and hold long enough (more than two seconds), the vibrator will turn off.

The vibrator goes on by itself.

The vibrator needs to be locked, otherwise it may turn on unintentionally if the button accidentally gets pressed. Press and hold both buttons for 4 seconds to activate/deactivate travel lock.

The light on the button does not go on.

The vibrator is running low on charge or power. Charge it using the instructions in the charging section.

I dropped the vibrator, is it broken?

Like all electronic devices, SWAN® is a delicate product that can get damaged internally. It is possible that your vibrator could be broken. To test it, lock and unlock the vibrator, charge the device and check it

My vibrator is taking longer than indicated to charge.

In some cases, charging may take longer in certain power sources than others. Please be advised that for maximum results, it is suggested to plug the USB charging cable into a USB 2.0 or higher wall adaptor for your region. s performance.

1-YEAR LIMITED WARRANTY:

All SWAN® products offer a complimentary 1-year limited warranty for any defects in materials and workmanship from the date of original retail purchase. This is strictly limited to the repair or replacement of the purchased product and does not cover damage or tears and rips in the silicone caused by physical or natural destruction, misuse, or other external causes. Any attempt

to disassemble the SWAN® product will result in the withdrawal of warranty privileges. The customer is responsible for all shipping and handling costs along with itemized proof of purchase (hold on to your receipt). SWAN® must be notified about your return item before sending out the product.

SWAN® reserves the right to refuse and return damaged items that do not follow the above description after inspecting the returned item. All shipping and importing costs are non-refundable and will be charged to the customer. If SWAN® decides to replace the component, the replacement will not extend the life of this warranty. SWAN® will not accept any additional charges for work performed by the customer or a third party unless it is authorized by

www.swanvibes.com. All SWAN® products are sold as novelty items only.

Register now www.swanvibes.com/register