



MINI VIBRATOR

This Mini Vibrator is a small waterproof vibrator for a night full of pleasure. Perfect to spoil yourself or each other during foreplay. The vibrator provides 30-60 minutes of pleasurable vibrations for all your sensitive spots! Batteries are included.

Dieser Mini-Vibrator ist ein kleiner wasserdichter Vibrator für eine Nacht voller Vergnügen. Perfekt, um sich während des Vorspiels selbst oder gegenseitig zu verwöhnen. Der Vibrator bietet 30 bis 60 Minuten angenehme Vibrationen für alle deine empfindlichen Stellen! Batterien sind im Lieferumfang enthalten.

Ce mini vibromasseur est un petit vibromasseur étanche pour une nuit pleine de plaisir. Parfait pour vous faire plaisir ou vous faire plaisir mutuellement pendant les préliminaires. Le vibromasseur offre 30 à 60 minutes de vibrations agréables pour toutes vos zones sensibles ! Les piles sont incluses.

Deze Mini Vibrator is een kleine waterdichte vibrator voor een avond vol plezier. Perfect om jezelf of elkaar te verwennen. De vibrator zorgt voor 30-60 minuten aan plezierige vibraties voor al je gevoelige plekjes! Batterijen zijn meegeleverd.

Dimensions: 5,5 x ø 1,7 cm / 2.17 x ø 0.67 inch Weight: 21gr / 0.74 oz Material: Silicone

PR.Nr.:E24603



8 717903 271476

DISCLAIMER: All rights reserved. This product is under no circumstances to be considered as a medical device. Only use the product as instructed. Compatible with water-based lubricants. Read the user manual carefully before use.

LOVE IN THE POCKET is a registered trademark.
All rights reserved.

Produced in license by EQOM Purchasing B.V. Made In China.

Phoenixweg 8, 9641 KS, Veendam NL (EU)

Customer service: +31 (0)598 - 69 04 53 info@loveinthepocket.eu

WWW.LOVEINTHEPOCKET.EU



DISCLAIMER

All rights reserved.

This product is under no circumstances to be considered as a medical device.

Only use the product as instructed.

Compatible with water-based lubricants.

Read the user manual carefully before use.



SPECIFICATIONS

Materials

Silicone

Size

5,5 x 1,7 x 1,7 cm | 2.17 x 0.67 x 0.67 inch

Weight

21 g | 0.74 oz

Vibration settings

1 mode

Battery

3x AG13 (included)

Operating time

30-60 minutes

Before use

Open the mini vibrator and remove the white paper. Twist the cap back.

Use

This mini vibrator can be used to stimulate the erogenous zones, like the clitoris, the nipples, the perineum etc. Press the power button to turn the vibrations on. Press the power button again to turn the vibrations off.

Lubricant

Use water-based lubricant. Other lubricants and massage oils can negatively affect the material and are therefore discouraged.

Cleaning

After use, rinse the toy with lukewarm water. Make sure the water doesn't enter the inside of the toy. Apply toy cleaner or a mild soap and rinse with lukewarm water again. Lay the toy down to dry or dab it dry with a clean, lint-free cloth or towel.

Storage

Safely store the toy in a dry and dark place without extreme temperatures, out of reach of children and animals. Use a toy bag to protect the toy from dust and scratches. Do not store this product right next to other toys.

Safety instructions

Do not use the toy in the following situations:
on swollen, irritated or inflamed skin, in case of

vaginal infection, in the first 6 weeks after child-birth, after surgery in the pelvic area, if one of the components is damaged and/or if you have an allergic reaction to the material or if you are aware of an existing allergy to the material. In case you feel pain and/or discomfort, stop using the toy immediately and refrain from further use. In case of cardiovascular disease or pregnancy, consult your doctor before using the toy. Do not use the toy in the neck area. Do not share the toy with others to avoid illness and infection. Never use old and new batteries or batteries of different types at the same time. After inserting the batteries, make sure the battery compartment is tightly closed. Thoroughly clean the battery compartment in case of battery leakage. After use, remove the batteries from the toy to extend their life and prevent corrosion. Moisture can damage the engine and batteries. If moisture enters the inside of the toy, turn off the toy immediately. Open the toy and remove the batteries. The toy may only be used when the inside of the toy is completely dry. In case of overheating, switch the toy off immediately and allow it to cool before using again. Do not clean with products that contain alcohol, petrol, silicone, acetone, or other corrosive substances. Not suitable for the washing machine or dishwasher. Suitable for external use. Only use the toy as intended and as directed.

Disposal information

Do not dispose of this product in household waste. The symbol of the crossed-out dustbin indicates

the separate collection of electrical and electronic waste. Dispose of the product at a collection point for the recycling of electronic devices. As a distributor of electronic equipment, we accept returns of discarded electrical and electronic equipment free of charge. Consider local disposal options and avoid the creation of unnecessary waste.

Need help?

If you have any questions regarding this product, do not hesitate to contact customer service.

☎ +31 (0) 598-690 453

✉ info@loveinthepocket.eu

🌐 www.loveinthepocket.eu